



AUTOMATIC DISH WASH NEUTRALIZER

ECODO ADN - K7

It rinse aid for automatic dishwasher that prevents water spots and streaking on glasses and dishes. Automatic dish wash neutralizer ensure extra sparkle and a spotless shine every time.

INSTRUCTIONS FOR USE

Fill the rinse aid reservoir on your dishwasher door with dish wash neutralizer. Checks level regularly. On an average you should refill once a month.

CONTAINER

25 Ltr

SPECIFICATION

Appearance	Clear Liquid
Colour	Blue
Odour	Characteristic
PH value	4.0-5.0
Explosion limits	None
Oxidizing properties	None
Water solubility	Easily soluble in water

PRECAUTION

Surfaces and objects that come into direct contact with food, freed from cleaning residues by careful rinsing with water. Keep locked up and place reach out of children. If swallowed, please seek medical advice immediately and show this container label.

NOTE

The above information is in good faith but without warranty. Refer to product Material Safety Data Sheet for specific health hazard, first aid and precautionary information.

